




Program-O-Tron

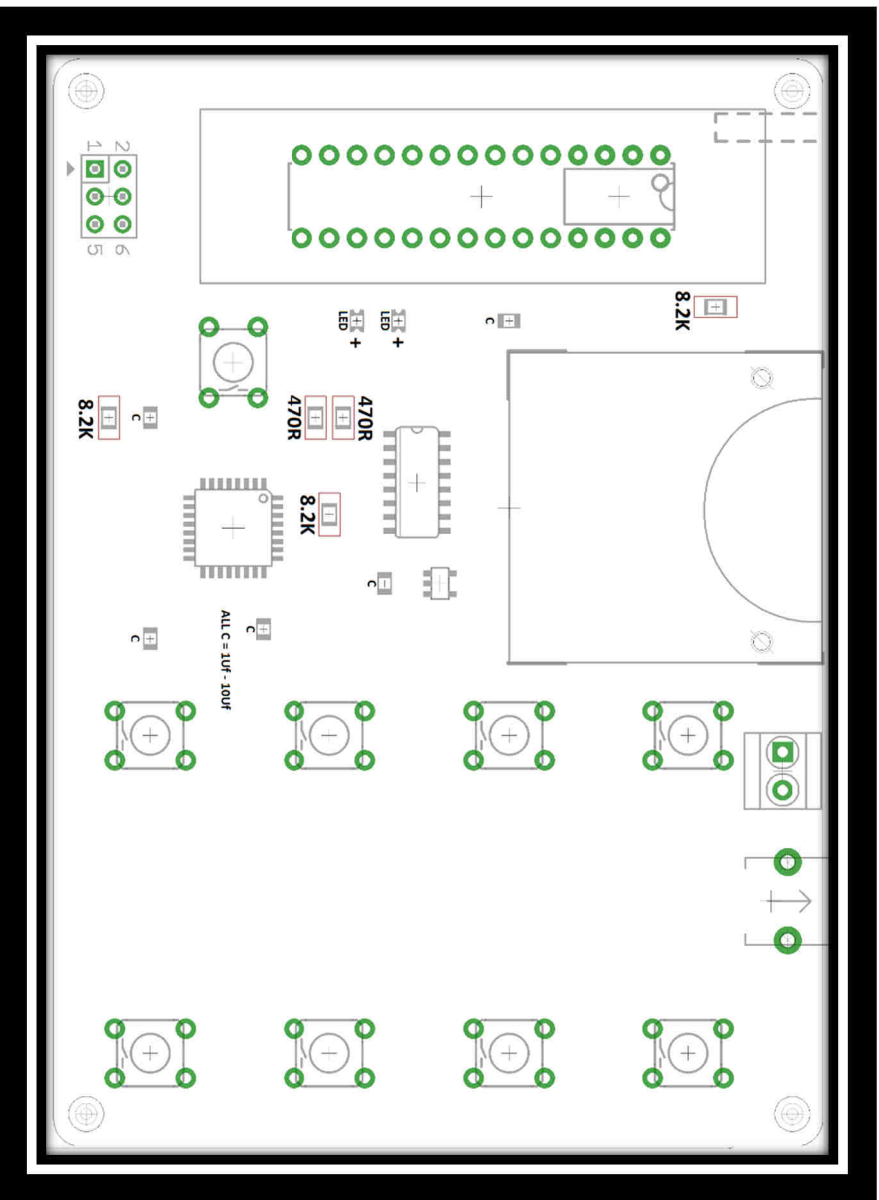

### Parts Placement

- SD Card holder : Proto-PIC – PPPRT-12769 or Sparkfun – PRT-12769
- USB Connector : Proto-PIC – PPKIT4003USB
- 16 Pin logic level converter : RS-Components – 124-2311
- 5 Pin Voltage regulator : RS-Components – 923-3697
- 6MM Tactile buttons : Proto-PIC – PPCOM-00097-10
- 6 Pin header : Proto-PIC – PPPRT12807
- ZIF Socket : Proto-PIC - PPPRT-09175
- 2 Pin 3.5MM pitch screw terminal : Proto-PIC - PPPRT-08084