FG085 Function Generator Assembly Guide Applicable Model: 08503K

Tools required

- 1. Soldering iron (20 25W)
- 2. Thin raisin-core solder of ideally 0.8mm diameter
- 3. Diagonal flush cutter
- 4. Screw driver


Important Notes

- 1. Follow the numbered order to install.
- 2. Only install parts given in the part list.
- 3. Pay special attention to polarity and orientation for electrolytic capacitors, headers, switches, and connectors (see detailed photos).

Part List

Descriptions	Qty	Ref.
Connector, USB mini-B	1	J10
E-cap, 100uF/16V	3	C5, C9, C10
E-cap, 470uF/25V	2	C3, C4
Connector, DC005, 2mm core	1	J1
Header, 5 X 2, 2.54mm	2	J6, J8
Header, 16 X 1, 2.54mm	1	
LCD, 1602A, white-in-blue	1	LCD1
Pushbutton, lockable	1	SW1
Pushbutton, non-lockable	20	SW2-21
Rotary encoder, w/ pushbutton	1	SW22
BNC connector, panel mount	1	J4
Metal lead	1	
Knob cap	1	
Panels, front and back	1 each	
Standoff, M3 x 12	4	
Standoff, M3 x 12 + 6	4	
Screw, M3 x 5	8	
PCB, SMD pre-soldered	1	

Tech Support: Forum: http://forum.jyetech.com Email: support@jyetech.com

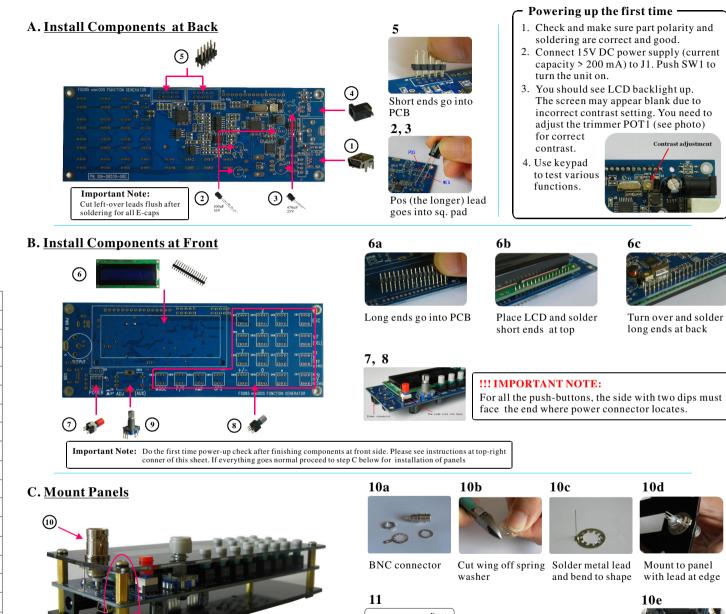



Install panels and solder up at back

Copyright JYE Tech Ltd. 2011 www.jyetech.com

DN085-06v01

(III)





Standoff mounting (4 places)